

# Technical Bulletin

HAMMOND ORGAN

"music's most glorious voice"

May 3, 1965

TO ALL MAINTENANCE ENGINEERS - FOR IMMEDIATE ACTION

NO. MODELS


SUBJECT: \* IMPROVED REVERBERATION RESTRAINT BRACKET

19 L-100 Series  
M-100 Series  
S-100 Series

An improved method for immobilizing the reverberation unit has been devised to replace the present corrugated inserts, and will be on all units mentioned above in the near future.

It will be a formed metal bracket, and will be locked in place by bending the two end tabs over the outer edges of the "R" unit body.

This bracket can, and should be re-used whenever the organ is to be moved any appreciable distance.

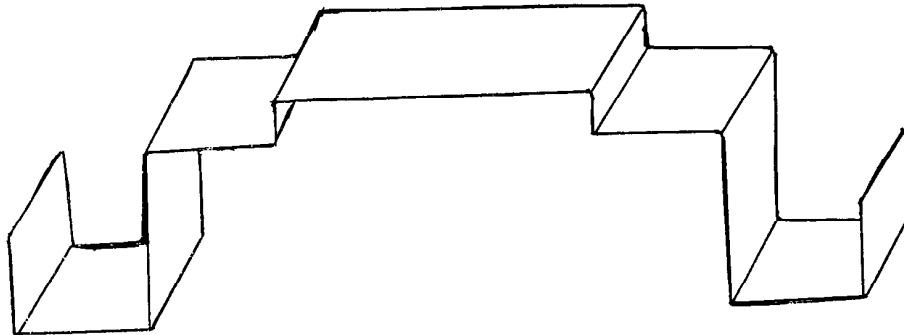

\* This change is a direct result of data compiled from Dealer Service Report Cards. Keep up the flow of this valuable information!!!

DV/bf

Reprinted January 25, 1966 - 1-M

NOTE: This bulletin is a confidential letter to the Hammond dealer organization and is not for general distribution.  
HAMMOND ORGAN COMPANY, 4200 W. DIVERSEY AVE., CHICAGO, ILL., 60639